


Package Contents		
Part	Description	Quantity
Α	LED Projector	1 Piece
В	Logo Slide	1 Piece
С	Infrared Sticker	1 Piece

Requires 3 - AAA batteries - not included



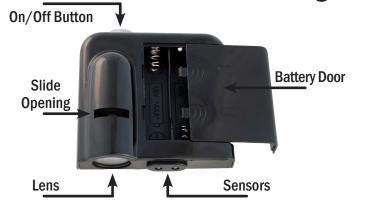

Step 1: Install AAA batteries (not included). If not already loaded, insert the team logo slide, and turn on the light.



Step 2: Identify a flat surface on the inner car door panel. Place the projector as close as possible to the door's edge. From inside the car, test the placement before removing the adhesive to ensure you can easily close the door. Clean the surface and let dry.



Step 3: Carefully remove the red adhesive backing. With the lens facing down, firmly attach projector to the cleaned door surface.



See above photo for proper placement of projector and infrared sticker.





Step 4: Apply the silver infrared sticker to the corresponding door threshold by aligning the sticker directly under the projector sensors when the door is closed. The LED Car Door Light will automatically light up at night when the car door is open and shut off when the door is closed.

Troubleshooting:

- 1. If the light blinks or flashes, adjust the infrared sticker under the projector sensors.
- 2. Adhesive is one time use only.
- Make sure the light is on by pressing the ON/OFF button on the top of the projector. Garage and ambient light may affect the sensor performance.
- 4. If image is backwards, remove lens, flip over and reinstall.
- 5. Universal fit for most cars.